


ACE *ECOBITE II PRO* — QUICK REFERENCE GUIDE

Accent Electronic Controls Inc.

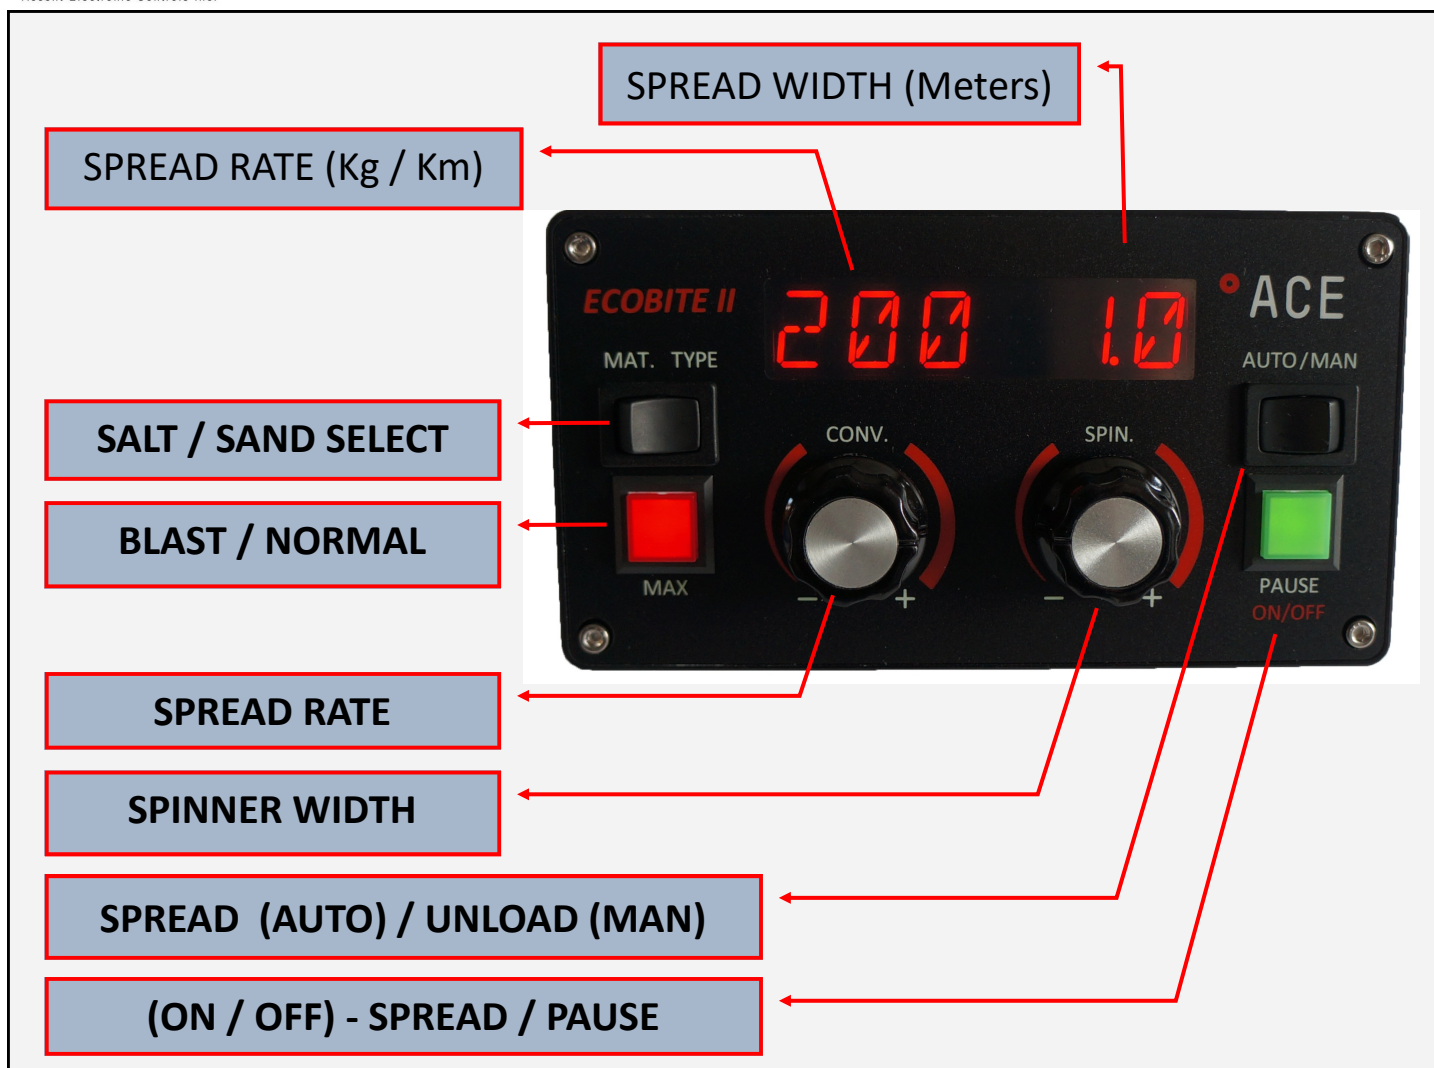

OPERATOR FUNCTIONS:

Turning controller on and off: Press and hold **GREEN** button.

Getting ready for normal spreading operation: Set **AUTO/MAN** toggle switch to **AUTO**.

Selecting material type: Rock **MAT TYPE** toggle switch until **SALT** or **SAND** appears in display.

Selecting application rate: Rotate **CONV.** dial until desired rate appears in display.

Selecting application spread width: Rotate **SPIN** dial until desired pattern is shown.

Start and Pause spreading: Press the **GREEN** button momentarily.

Toggle Blast mode on and off: Press the **RED** button momentarily.

Unloading: Set **AUTO/MAN** toggle switch to **MAN** Press the **GREEN** button momentarily to start and stop. Rotate **CONV** dial to control conveyor speed. Rotate **SPIN** dial to clear spinner.

Reading spreader registers: Turn controller off. Rock **MAT TYPE** switch. Press **MAX** button.

www.aceelectronic.ca



READING LOGS

1. Turn spreader controller OFF (press and hold GREEN ON/OFF button)
2. Flip MAT TYPE rocker switch once => the last used material type appears in the display
3. Press the MAX (Blast) button to toggle through each counter (label flashes, then value)
 - ⇒ SPR KM: Spread Kilometers
 - ⇒ SPR KG: Spread Kilograms
 - ⇒ MAX KM: Blast Kilometers
 - ⇒ MAX KG: Blast Kilograms
 - ⇒ PAU KM: Kilometers while in controller in PAUSE
 - ⇒ OFF KM: Kilometers while controller turned OFF

Note: Spreader controller will automatically power off after 30 seconds of inactivity.

RESETTING TRIP COUNTERS TO ZERO

1. While controller is turned off, flip MAT TYPE rocker switch once
2. Flip AUTO / MAN rocker switch once => Display shows "RESET CONTER"
3. Press MAX (Blast) button once => Long beep sounds and display shows:
"COUNTER RESET TO ZERO"

Note: Spreader controller will automatically power off after 30 seconds of inactivity.