

OPERATOR FUNCTIONS:

Turning controller on: Press and hold **any** top display button.

Getting ready for normal spreading operation (using Chlorocom switch panel):

- Toggle spreader  switch down to see selected rates in display
- Select material type** by pressing **MAT TYPE** button until **SLT** or **SND** appears in display.
- Select granular application rate:** Toggle **K/K** switch until desired rate appears in display.
- Select liquid application ratio:** Toggle **L%** switch until desired ratio appears in display.
- Select application spread width:** Toggle **SPN** switch until desired pattern is shown.
- Start and Pause spreading:** Toggle  switch **DOWN** to activate /deactivate as required.



Toggle Blast mode on and off: Toggle  switch **UP** to activate /deactivate as required.

Unloading: On the top display, press and hold together the  and  buttons until the display shows "UNLOADING". Press the  button to sequentially activate the conveyor, the spinner, the liquid pump and then stop unloading.

Reading spreader registers: Leave key on and read alternating registers on right side of display. (Note: The spreader controller will stay on for 2 minutes only after the ignition key is turned off, after which the data registers are nulled.)

Dimming display: Sequentially press the blue button on top of the display to select the desired display intensity.

www.aceelectronic.ca

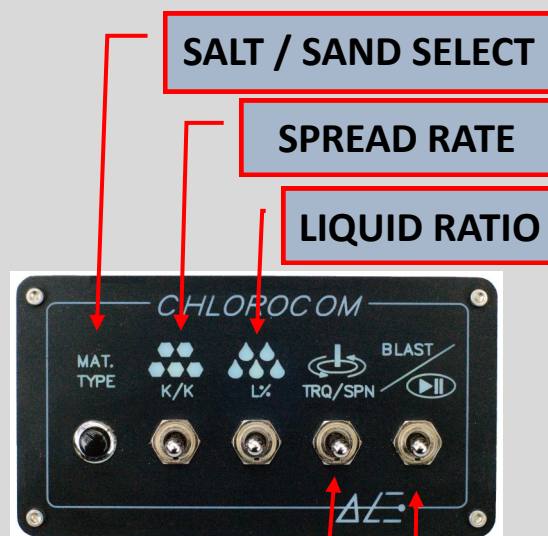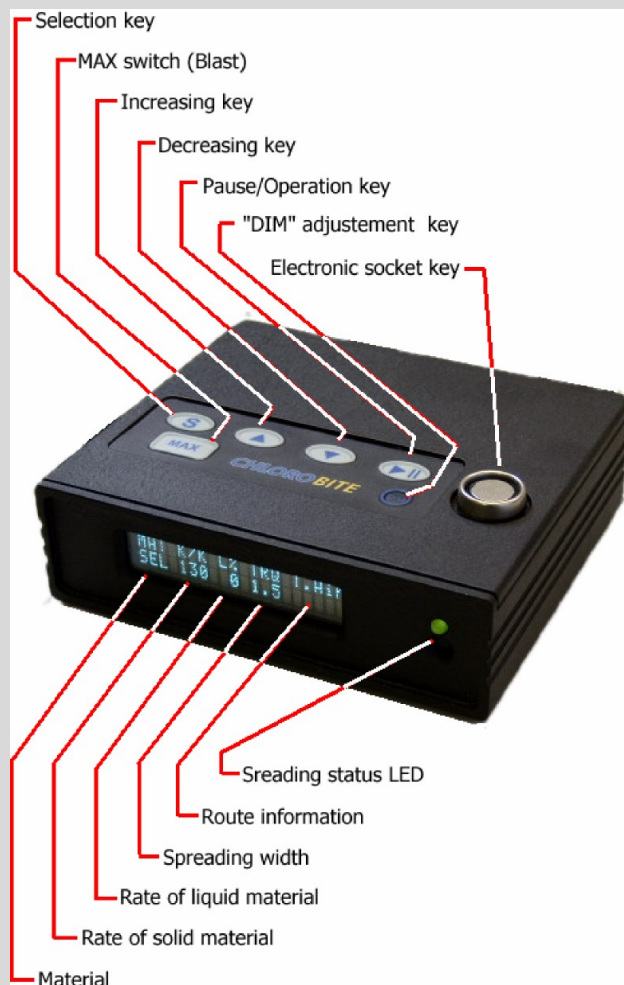

SPINNER WIDTH

↑ **BLAST / NORMAL**

↓ **SPREAD / PAUSE**